Leak Detection Sensor Amplifier Built-in

X-F60 SERIES

panasonic.net/id/pidsx/global

FIBER SENSORS Related Information ■ General terms and conditions...... F-7

■ General precautions P.1458~

■ Sensor selection guide P.885~

LASER

PHOTOELECTRIC

MICRO PHOTOELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS PRESSURE /

FLOW SENSORS INDUCTIVE PROXIMITY **SENSORS**

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE **INTERFACES**

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide

Wafer Detection

Liquid Level Detection

Color Mark

Detection

Ultrasonic

Obstacle

Detection

SQ4

Water Detection

Hot Melt Glue Detection

Small / Slim Object Detection

Other Products

 $C \in$ Conforming to EMC Directive

■ Korea's S-mark...... P.1506



 


High-speed detection even a little liquid leak

EX-F70 SERIES

Reliable detection

The unique effect of capillarity enables reliable detection of small leaks and viscous liquids.



New type of detection method

When a leak occurs, the beam from the beam-emitting part scatters through the leaked liquid and is not transmitted to the beam-receiving part.

<When leakage occurs> Beam-emitting part Beam-receiving part Sensing Leaked surface liquid

Leakage pan

The beam from the beam-emitting part scatters through the leaked liquid and is not transmitted to the beam-receiving part.

<When there is no leakage> Beam-emitting part Beam-receiving part Sensing surface

Leakage pan

The beam from the beam-emitting part reflects off of the surface of the sensor and is transmitted to the beam-receiving part.

PVC mounting bracket type

EX-F72

Compact, space-saving

This slim (10 mm 0.394 in) 10 mm side-mounting sensor is especially good for use approx. in confined spaces.

SUS mounting bracket type

EX-F71

No need for sensitivity adjustment

No need for sensitivity adjustment with adjuster, so initial mounting is easy.

Easy operation check

This sensor is equipped with a NORMAL indicator (green) which lights up when mounting correctly, and a FAULT indicator (red) which lights up when sensing the leaked liquid or when mounted incorrectly (forgetting to mount exclusive mounting bracket). So, the operation can be checked easily.

Safe design

If the sensor is not mounted correctly, if the cable is broken or disconnected, or if the sensor is not operating correctly, the output is the same as when the beam is not received (LEAK). Design deals with human errors such as, forgetting to mount, etc.

Easy installation & reset

Facilitates easy installation: the SUS mounting bracket type can be installed using only a single screw and the PVC mounting bracket type can be installed using only two screws or an adhesive. No component replacement required for resetting after leak detection. The simple shape makes it easy to wipe off the leaked liquid.

PVC mounting bracket available

EX-F72

A mounting bracket made of PVC (polyvinyl chloride) is available. This mounting bracket can be used normally in environments that would corrode normal metal brackets.

EX-F60 SERIES

PFA enclosure gives excellent chemical resistance

The sensor enclosure and the cable sheath are made from PFA which is highly resistant to chemicals. Accurate sensing is achieved even if there are leaks of chemicals such as sulfuric acid, hydrochloric acid or ammonia.




Easy installation & reset

The simplified shape makes it easy to clean up after liquid leaks, simply by wiping off the liquid, and no parts need to be replaced.

Compact, space-saving

Even with its built-in amplifier, the size is compact at W26 × H19 × D9 mm W1.024 × H0.748 × D0.354 in, so that it can be used even in narrow spaces.

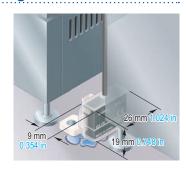

EX-FC1

Wire-saving unit made especially for connecting leak detection sensors!

Saves wiring! Now connects up to 8 leak detection sensors

EX-FC1 is a simple wire-saving unit for exclusive use with **EX-F71/F72**, **EX-F61/F62** leak detection sensors.

(It can be used with general sensors as well.) **EX-FC1** integrates the outputs from up to 8 leak detection

EX-FC1 integrates the outputs from up to 8 leak detection sensors into a single OR output, so significant wiring and space savings are achieved.

* Even with only one leak detection sensor connected, an OFF signal is output if the sensor detects liquid leakage, or if the unit has been installed incorrectly.

Slim & compact

Space savings are significant, as the ultra-thin & compact **EX-FC1** has main unit body dimensions of only W20 × H80 × D52 mm W0.787 × H3.150 × D2.047 in.

Connects easily with one-touch connector

Connections are made by simply inserting the leak detection sensor cable leads into the snap male connector **SL-CP1**, then push until the connector snap-locks! This saves the time and the trouble of stripping the insulation from each lead before attaching to terminals.



ORDER GUIDE

Leak detection sensors

Туре		Appearance Sensing object		Cable length	Model No.	Output	
ø	SUS mounting bracket type		Water, Fluorinert™ (Note 1, 2)		EX-F71	NPN open-collector transistor	
purpos				2 m 6.562 ft	EX-F71-PN	PNP open-collector transistor	
General purpose	PVC mounting bracket type				EX-F72	NPN open-collector transistor	
					EX-F72-PN	PNP open-collector transistor	
Chemical-resistant	PFA mounting bracket type		Agent, such as Sulfuric acid, Hydrochloric acid, Phosphoric acid or Ammonia etc. (Note 1, 3, 4)	3 m 9.843 ft	EX-F61	NPN open-collector transistor	
					EX-F61-PN	PNP open-collector transistor	
	PVC mounting bracket type	Ar			EX-F62	NPN open-collector transistor	
					EX-F62-PN	PNP open-collector transistor	

Notes: 1) Highly viscous liquid may not be detected stably.

- 2) Fluorinert $^{\text{TM}}$ is the world wide trademark of 3M.
- 3) The agents mentioned above are examples. For details, please contact our office.
- PVC mounting brackets may not be suitable for use depending on the concentration of the detection target. For details, please contact our office.

5 m 16.404 ft cable length type

 $5\ m$ $16.404\ ft$ cable length type (standard: $2\ m$ $6.562\ ft$ or $3\ m$ $9.843\ ft)$ is also available.

When ordering this type, suffix "-C5" to the model No. (e.g.) 5 m 16.404 ft cable length type of EX-F71-PN is "EX-F71-PN-C5".

Simple wire-saving unit for leak detection sensor

omple thre cutting and for loak action concor				
Appearance	Model No.	Output		
	EX-FC1	Relay contact 1 a		

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-PHOTO-

AREA SENSORS

CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

MIRE-SAVING JNITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION

FA COMPONENTS

MACHINE VISION SYSTEMS

> V URING YSTEMS

Selection Guide Wafer Detection Liquid Leak Detection Liquid Level Detection

Water Detection

Color Mark Detection

Hot Melt Glue Detection

Ultrasonic

Small / Slim
Object Detection

Obstacle Detection Other Products

SQ4 EX-F70/ EX-F60 FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS PRESSURE / SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES LASER MARKERS

PLC HUMAN

FA COMPONENTS

MACHINE VISION SYSTEMS

CURING SYSTEMS

Selection Guide Wafer Detection Liquid Level Water Color Mark Detection Hot Melt Glue Ultrasonio Small / Slim Object Detection Obstacle Detection

SQ4

Other Products

OPTIONS

Designation Model No.		Description			
Unit mounting bracket MS-DIN-3		Mounting bracket for EX-FC1			
Connector end cap	SC-PK	Connector end cap for EX-FC1 8 pcs. per set			

Unit mounting bracket

• MS-DIN-3



Accessories

• MS-EX-F7-1 SUS mounting bracket

• MS-EX-F7-2 (PVC mounting bracket) for adhesive fixing

• MS-EX-F7-3

\for two-point fixing

 
• MS-EX-F6-1 /PFA mounting bracket

 
• MS-EX-F6-2 PVC mounting bracket

• SL-CP1 (Snap male connector) 10 pcs. per set

 
• MS-SL-2 Unit mounting base

• SC-PK (Connector end caps) 8 pcs. per set









SPECIFICATIONS

Sensors

		Tuno	General purpose		Chemical-resistant		
		Туре	SUS mounting bracket type	US mounting bracket type PVC mounting bracket type		PVC mounting bracket type	
Item Signature NPN out PNP out		NPN output	EX-F71	EX-F71 EX-F72 EX-F61		EX-F62	
Item	Mode 1	PNP output	EX-F71-PN	EX-F72-PN	EX-F61-PN	EX-F62-PN	
Sensing object			Water, Fluorinert™ (Note 2, 3)		Agent, such as Sulfuric acid, Hydrochloric acid, Phosphoric acid or Ammonia etc. (Note 2, 4, 6)		
Supp	oly voltage		12 to 24 V DC ±10 % Ripple P-P 10 % or less				
Curr	ent consum	nption	10 mA or less (PNP out	put type: 15 mA or less)	15 mA	or less	
Output			<npn output="" type=""> NPN open-collector transistor Maximum sink current: 50 mA Applied voltage: 30 V DC or less (between output and 0 V) Residual voltage: 1.0 V or less (at 50 mA sink current) 0.4 V or less (at 16 mA sink current) SPNP output type> Maximum source current: 50 mA Applied voltage: 30 V DC or less (between output and +V) Residual voltage: 1.0 V or less (at 50 mA source current) Residual voltage: 1.0 V or less (at 16 mA source current) </npn>				
	Utilization	category	DC-12 or DC-13				
	Output op	eration	In normal state: ON, When leak detected or the sensor is mounted improperly: OFF				
	Short-circu	uit protection	Incorporated				
Resp	onse time		50 ms or less				
FAU	LT indicato	r	Red LED (lights up when the leak liquid is detected, or the sensor is mounted improperly)				
NOF	RMAL indica	ator	Green LED (lights up when the sensor is mounted properly)				
Pollu	ition degree	9	3 (Industrial environment)				
Prote	ection		IP67 (IEC)				
Amb	ient temper	rature	-10 to +60 °C +14 to +140 °F (No dew condensation or icing allowed), Storage: -20 to +70 °C -4 to +158 °F (Note 5)				
Amb	ient humidi	ty	35 to 85 % RH, Storage: 35 to 85 % RH				
Amb	ient illumina	ance	Incandescent light: 1,000 & at the light-receiving face				
Emitting element		nt	Infrared LED (non-modulated)				
Material			Enclosure: P	71 17	Enclosure: PFA		
Cable			0.1 mm ² 3-core PVC cabtyre cable, 2 m 6.562 ft long 0.1 mm ² 3-core PFA cabtyre cable, 3 m 9.843 ft long				
Cable extension		1	Extension up to total 50 m 164.042 ft is possible with 0.3 mm², or more, cable.			cable.	
Weight			Net weight: 25 g approx. Net weight: 60 g approx.			60 g approx.	
Accessories			MS-EX-F7-1 (SUS mounting bracket) (Note 7): 1 pc.	MS-EX-F7-2, MS-EX-F7-3 (PVC mounting bracket) (Note 7):1 pc. each for two-point-fixing and adhesive-fixing	MS-EX-F6-1 (PFA mounting bracket): 1 pc.	MS-EX-F6-2 (PVC mounting bracket): 1 pc.	

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

- 2) Highly viscous liquid may not be detected stably.
- 3) Fluorinert™ is the world wide trademark of 3M.
- 4) The agents mentioned above are examples. For details, please contact our office.
- 5) Liquid being detected should also be kept within the rated ambient temperature range.
- 6) PVC mounting bracket may not be used depending on type or viscosity etc. of the agent. For details, please contact our office.

7) The mounting bracket for EX-F71(-PN) is not interchangeable with that of EX-F72(-PN) due to the different sensitivity settings of each sensor.

SPECIFICATIONS

Simple wire-saving unit

	Designation	Simple wire-saving unit for leak detection sensor				
Iten	n Model No.	EX-FC1				
Applicable connector		SL-CP1				
Sup	ply voltage	12 to 24 V DC ±10 % Ripple P-P 10 % or less				
Current consumption		50 mA or less (for the unit itself), 135 mA or less (including the sensor input current when all outputs of sensors are ON)				
Output		Relay contact 1a • Switching capacity: 30 V 1 A DC (resistive load) • Min. applied load: 10 mV 10 µA DC • Electrical lifetime: 100,000 switching operations or more (rated load, switching frequency 20 operations/min.) • Mechanical lifetime: 50 million switching operations or more (switching frequency 180 operations/min.)				
	Utilization category	DC-12 or DC-13				
	Output operation	The output relay is ON when the input signal from the sensor is ON (Note 2)				
Res	ponse time	5 ms or less (excluding the response time of the sensor)				
Input No.		8 Nos.				
ors	Normal	Green LED × 8 (light up when the sensor is connected to each channel and the connection setting switch is set to ON)				
Indicators	Error	Red LED × 8 (light up when the leak liquid is detected by a sensor connected to each channel or a sensor is mounted improperly)				
<u>=</u>	Output	Orange LED [lights up when the output relay is ON (normal)]				
Pollution degree		3 (Industrial environment)				
Amb	pient temperature	-10 to +60 °C +14 to +140 °F (No dew condensation or icing allowed), Storage: -20 to +70 °C -4 to +158 °F				
Ambient humidity		35 to 85 % RH, Storage: 35 to 85 % RH				
Material		Enclosure: ABS, Unit mounting base: POM, Terminal part: PBT				
Cable		0.2 mm ² 4-core cabtyre cable, 2 m 6.562 ft long				
Cable extension		Extension up to total less than 10 m 32.808 ft is possible, with 0.3 mm², or more, cable.				
Weight		Net weight: 85 g approx.				
Acc	essories	SL-CP1 (Snap male connector): 8 pcs., MS-SL-2 (Unit mounting base): 1 pc.				

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

2) Even with only one leak detection sensor connected, an OFF signal is output if the sensor detects liquid leakage, or if the unit has been installed

incorrectly.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

SENSOR OPTIONS

MEASURE-MENT SENSORS

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide Wafer Detection Liquid Level Detection

Water Detection Hot Melt Glue Detection

Ultrasonic

SQ4



LASER SENSORS PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS LIGHT CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS STATIC ELECTRICITY PREVENTION DEVICES LASER MARKERS

PLC HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS FA COMPONENTS

MACHINE VISION SYSTEMS CURING SYSTEMS

Selection Guide Wafer Detection Liquid Leak Detection Liquid Level Detection Water Detection Color Mark Detection Hot Melt Glue Detection Ultrasonio Small / Slim Object Detection Obstacle Detection

SQ4

■ I/O CIRCUIT AND WIRING DIAGRAMS


EX-F7_□ EX-F6_□ NPN output type I/O circuit diagram Wiring diagram EX-F7 Color code D (Brown) +V Brown Load _12 to 24 V DC Black circuit Load ₹ ±10 % (Black) Output 12 to 24 V DC Blue Sensor o ±10 % Tr N **≭**Z⊳ (Blue) 0 V EX-F6□ Brown Internal circuit +--→ Users' circuit Load + 12 to 24 V DC Black Symbols ... D : Reverse supply polarity protection diode Blue ZD: Surge absorption zener diode

EX-F7 -PN EX-F6 -PN

Tr: NPN output transistor


PNP output type

I/O circuit diagram

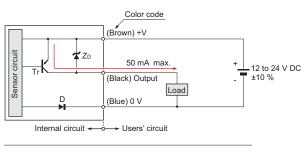


Symbols \dots D : Reverse supply polarity protection diode ZD: Surge absorption zener diode Tr : PNP output transistor

Wiring diagram

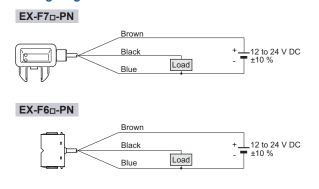

EX-FC1

Simple wire-saving unit for leak detection sensor I/O circuit diagram (for one channel)

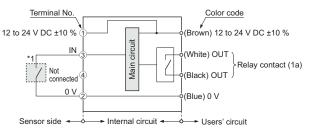

Note: The output does not incorporate a short-circuit protection circuit. Do not connect it directly to a power supply or a capacitive load.

Non-voltage contact or NPN open-collector transistor (Amplifier built-in leak detection sensor)

PRECAUTIONS FOR PROPER USE

Refer to p.1458~ for general precautions

<u>^</u>

 Never use this product as a sensing device for personnel protection.

 
 In case of using sensing devices for personnel protection, use products which meet laws and standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.

EX-F71(-PN) EX-F72(-PN)

Mounting

EX-F71(-PN)


• Insert the M4 stud-bolt (length 10 mm 0.394 in or more) welded on the user's facilities into the mounting hole of the SUS mounting bracket and screw with an M4 nut (please arrange separately). The tightening torque should be 0.98 N·m or less.



EX-F72(-PN)

<In case of using the two-point-fixing PVC mounting bracket>

  Insert M4 stud-bolts (length 10 mm 0.394 in or more) welded on the user's facilities into the mounting holes of the two-point-fixing mounting bracket and screw with M4 nuts (please arrange separately).
 The tightening torque should be 0.49 N·m or less.



<In case of using the PVC mounting bracket for adhesive fixing>

 Use adhesive to stick fast the mounting bracket on the mounting surface. Please note that if the adhesive sticks out from the bottom surface of the mounting bracket or is 0.5 mm 0.020 in, or more thick, the sensor body cannot be fitted to the mounting bracket.

How to fit the sensor body to the exclusive mounting bracket

 Match the notch in the sensor body with the projection of the exclusive mounting bracket and slide till a click is felt.



• When mounting, make sure to use the brackets included with the unit in order to eliminate human error (such as forgetting to install). If the included brackets are not used, stable sensing is rendered impossible.

 
Also, because sensitivity settings differ between the EX-F71(-PN) and the EX-F72(-PN), their brackets cannot be interchanged.

EX-F61(-PN) EX-F62(-PN)

Mounting

EX-F61(-PN)

 Insert the M4 stud-bolt (length 10 mm 0.394 in or more) welded on the user's facilities into the mounting hole of the PFA mounting bracket and screw with an M4 nut (please arrange separately). The tightening torque should be 0.98 N·m or less.




EX-F62(-PN)

 Please note that if the excess adhesive from the bottom surface of the exclusive mounting bracket is remained, the sensing capability may be affected.
 Use adhesive for vinyl chloride (PVC).

How to fit the sensor body to the exclusive mounting bracket

  Align the projections in the sensor body with the notches of the exclusive mounting bracket and slide till a click is felt.





How to remove the sensor body from the exclusive mounting bracket

 Pinch the projections of the sensor body and pull the body upwards. Never pull the cable, since it may cause a cable break.





FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-

AREA SENSORS

CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW

SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING

Selection Guide Wafer Detection

Liquid Level Detection Water Detection Color Mark Detection

Hot Melt Glue Detection Ultrasonic

Small / Slim Object Detection Obstacle

Other Products

SQ4

EX-F70/ EX-F60 FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS COMPONENTS PRESSURE / SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

MEASURE-MENT SENSORS STATIC ELECTRICITY PREVENT

DEVICES LASER MARKERS

HUMAN

PLC

FA COMPONENTS MACHINE

VISION SYSTEMS CURING

Selection Guide Wafer Detection Liquid Leve Water Color Mark Detection

Hot Melt Glue Ultrasonic Small / Slim Object Detection Obstacle Detection

SQ4


PRECAUTIONS FOR PROPER USE

Refer to p.1458~ for general precautions.

EX-FC1

Mounting


- When mounting the unit, be sure to use the unit mounting base (MS-SL-2) (accessory).
- · When installing the unit mounting base to the unit, insert the base aligned with the grooves of the unit and move until the unit stopper is locked.

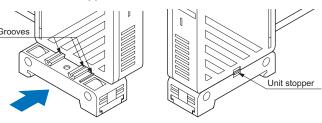

 Two installation positions are available for the unit mounting base so that the unit direction can be changed. Install the base at one of them.


Mounting position 2

 Mounting position 1



<In case of using a DIN rail or the mounting bracket (MS-DIN-3)</p> (optional)>

- ① Fit the rear part of the unit mounting base on a 35 mm 1.378 in width DIN rail or the mounting bracket (MS-DIN-3) (optional).
- 2 Press down the front part of the unit mounting base on the 35 mm 1.378 in width DIN rail and fit the front part of the base on the DIN rail.
 - * For removal, insert a flathead screwdriver into the DIN rail stopper and pull towards yourself.

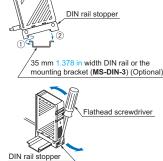


<In case of using screws>

 Mount using M4 pan head screws with a tightening torque of 0.8 N·m or less. However, in case of side mounting, make sure to mount the unit such that the unit stopper faces front.



Part description

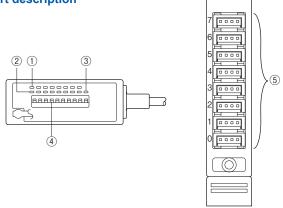

	Designation	Function
1	Normal indicator (Green LED × 8)	Lights up when sensors are connected to each channel and the connection setting switch is set to ON.
2	Error indicator (Red LED × 8)	Lights up when leak is detected by any sensor connected or any sensor is mounted improperly. (For details, refer to "Connection setting switch".)
3	Output indicator (Orange LED)	Lights up when the output relay is ON (Normal).
4	Connection setting switch	Set the switch to ON when the leak detection sensor is connected, set to OFF when the leak detection sensor is not connected.
(5)	Connector	Connect the leak detection sensors.

Connection

- Make sure to connect or disconnect the snap male connector (SL-CP1) in the power supply off condition.
- Take care that wrong wiring will damage the product.
- The terminal No. 4 of the snap male connector (SL-CP1) is not used.

Take care not to connect to the terminal No. 4 by mistake. Further, if there are unused wires, please insulate them.

1234
1 2 3 4

\leq	Content		
1	+V		
2	0 V		
3	IN		
4	No connected		

• For details of the hook-up method of the snap male connector (SL-CP1), refer to the Instruction Manual enclosed with SL-CP1.


Connection method

· By holding the SL-CP1 with the cable connected, insert it into the connector of the EX-FC1 reliably till it stops.

Disconnection method

. By holding SL-CP1, pull it from the EX-FC1 horizontally.

Note: Do not pull out by holding the cable, as this can result in cable disconnection.

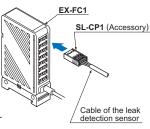

PRECAUTIONS FOR PROPER USE

Refer to p.1458~ for general precautions.

EX-FC1


Connection setting switch

 The connection setting should be carried out in the power supply off condition after removing any electrostatic charge which may be present on your body.

Operation matrix for each indicator

Operation	Connection state of the leak detection sensor	State of the connection setting switch	Leak detected condition	Normal indicator (Green)	Error indicator (Red)	Output indicator (Orange)
	Connected	ON	Not leaked	Lights up	Turns off	Lights up
Norma			Leaked	Turns off	Lights up	Turns off
	Unconnected	OFF		Turns off	Turns off	Lights up
Error	Connected	OFF	Not leaked	Lights up	Lights up	Turns off
	Unconnected	ON		Turns off	Lights up	Turns off

- For the channel that the unit sensor is connected to and the connection setting switch is set to "ON" side, the error indicator (red) lights up for a moment when the power is turned on. This is not a malfunction for the unit because it is caused by characteristic of the sensor.
- Make sure to set the connection setting switch with the connector No. to which the leak detection sensor is connected, to "ON" side.
- In case both the normal indicator (green) and the error indicator (red) light up, the connection setting switch with the connector No. to which the leak detection sensor is connected, is not set to "ON" side. Set the connection setting switch with the connector No. to which the leak detection sensor is connected, to "ON" side.
- In case the error indicator (red) lights up, the leak
 detection sensor detects leak or the connection setting
 switch is set to "ON" side without connecting the leak
 detection sensor. If the connection setting switch is set to
 "ON" side without connecting the leak detection sensor,
 set the connection setting switch to "OFF" side.
- If the leak detection sensor detects leak or the connection setting switch is set to "OFF" side in the state that the leak detection sensor is improperly mounted to the mounting bracket, the sensor judges as the output is ON. Be careful when setting.

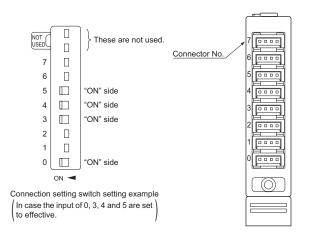

All models

Wiring

- · Make sure that the power supply is off while wiring.
- Verify that the supply voltage variation is within the rating.
 Take care that if a voltage exceeding the rated range or an AC power supply is directly applied, the sensor may get damaged or burnt.
- If power is supplied from a commercial switching regulator, ensure that the frame ground (F.G.) terminal of the power supply is connected to an actual ground.
- In case noise generating equipment (switching regulator, inverter motor,etc.) is used in the vicinity of this product, connect the frame ground (F.G.) terminal of the equipment to an actual ground.
- Do not run the wires together with high-voltage lines or power lines or put them in the same raceway. This can cause malfunction due to induction.
- Make sure to use an isolation transformer for the DC power supply. If an auto-transformer (single winding transformer) is used, this product or the power supply may get damaged.
- In case a surge is generated in the used power supply, connect a surge absorber to the supply and absorb the surge.
- Cable extension is possible up to total 50 m 164.05 ft with 0.3 mm², or more, cable (less than 10 m 32.81 ft for EX-FC1). However, in order to reduce noise, make the wiring as short as possible.
- Make sure that stress by forcible bend or pulling is not applied directly to the sensor cable joint.
- EX-FC1 output dose not incorporate a short-circuit protection circuit.
 - Do not connect it directly to a power supply or a capacitive load.

Others

- Avoid using the product in an explosive atmosphere because this product does not have an explosive-proof protective construction.
- When liquid remains on the sensing surface after leak detection, wipe all liquid from the sensing surface. To avoid scratching the sensing surface and the enclosed mounting bracket, use a soft cloth.
- In case air bubbles are drawn into the sensing part, take care that it may take some time for sensing to stabilize, or sensing may even become unstable.
- Check the usage conditions thoroughly before use.
- Do not use during the initial transient time (leak detection sensor: 50 ms approx., EX-FC1: 0.5 sec. approx.) after the power supply is switched on.
- Since this sensor employs non-modulated infrared LED, take sufficient care against extraneous light. Do not expose the sensing part directly to the extraneous light.
- Avoid dust, dirt, and steam. Further, do not use this product in an environment containing organic solvents.
- Take care that EX-7□(-PN) and EX-FC1 does not come in contact with oil, grease or organic solvents, such as, thinner, etc.
- In case this sensor is used where electrostatic charge is present, use a metal leak pan, which should be connected to an actual ground.
- · These sensors are only for indoor use.

FIBER SENSORS

LASER SENSORS PHOTO-

ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

> MPLE IRE-SAVING

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS STATIC ELECTRICITY

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION

FA COMPONENTS

MACHINE VISION SYSTEMS

> / JRING /STEMS

Selection Guide Wafer Detection Liquid Leak

Liquid Level Detection Water Detection Color Mark Detection

Hot Melt Glue Detection

Small / Slim Object Detection Obstacle Detection

Obstacle Detection Other Products

SQ4

EX-F70/ EX-F60 FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS AREA SENSORS

LIGHT
CURTAINS/
SAFETY
COMPONENTS

PRESSURE /
FLOW
SENSORS

INDUCTIVE
PROXIMITY
SENSORS

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS

MEASURE-MENT SENSORS STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS FA COMPONENTS

MACHINE VISION SYSTEMS UV CURING SYSTEMS

Selection Guide Wafer Detection Liquid Leak Detection Liquid Level Detection Water Detection Color Mark Detection Hot Melt Glue Detection Ultrasonic

> Small / Slim Object Detection Obstacle Detection Other Products

SQ4

EX-F70 EX-F60


DIMENSIONS (Unit: mm in)


The CAD data in the dimensions can be downloaded from our website.

EX-F71(-PN) EX-F72(-PN)

Senso

Assembly dimensions with mounting bracket for EX-F71(-PN)

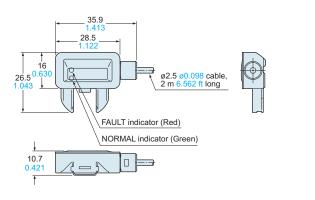


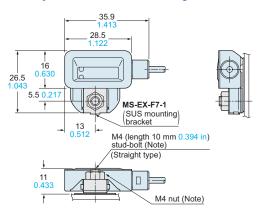

Note: A M4 stud-bolt has been welded to this unit. M4 nut is not supplied with the sensor. Purchase it separately.


Assembly dimensions with mounting bracket for EX-F72(-PN)

MS-EX-F7-3 / For two-point-fixing

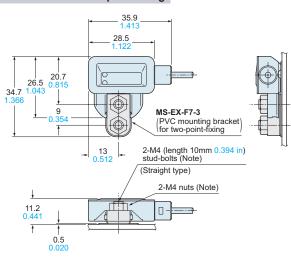

Note: M4 stud-bolts have been welded to this unit. M4 nuts are not supplied with the sensor. Purchase it separately.

MS-EX-F7-2 / For adhesive fixing

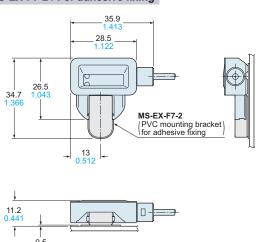


DIMENSIONS (Unit: mm in)


The CAD data in the dimensions can be downloaded from our website.


EX-F61(-PN) EX-F62(-PN)

ensor

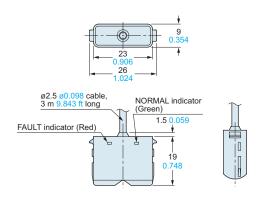

Assembly dimensions with mounting bracket for EX-F61(-PN)

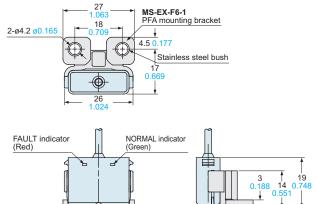


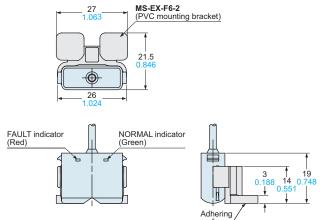


Assembly dimensions with mounting bracket for EX-F62(-PN)

MS-DIN-3

Unit mounting bracket (Optional)

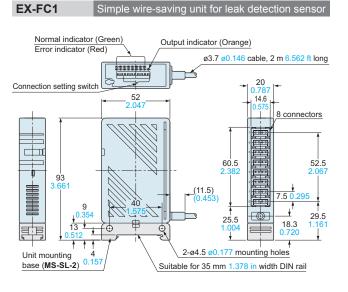

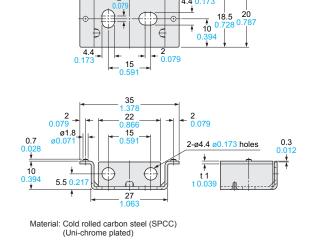

ENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION

FA COMPONENTS

> MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide Wafer Detection Liquid Leak Detection Liquid Level Detection

Water Detection Color Mark Detection

Hot Melt Glue Detection Ultrasonic

Object Detection
Obstacle
Detection
Other

Other Products

SQ4

EX-F70/ EX-F60